MODEL: 7180-1EXT

the carton. See hardware and furniture part list For guidance. Be sure you have all wooden furniture parts on a clean and flat soft surface, such as a carpet or rug, to prevent from being scratched. Follow the figure to start assembling.

- 1. Do not FULLY TIGHTEN the nut or screw untill all is ready to assemble.
- 2. Do not OVER TIGHTEN the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.

NO	PART LIST	QTY
Α	TABLE TOP	1 SET
В	TABLE LEGS	4 PCS

NO	DESRIPTION		QTY
1	HEX.COM SCREW 5 / 16" X 2 1 / 2"	(January)	8 PCS
2	FLAT WASHER	0	8 PCS
3	SPRING WASHER	0	8 PCS
4	SPANNER	<u>~</u>	1 PC

